

FIG-1

FIG. 2 is a perspective view of the mobile phone 10 in an open position, showing the front face 12 and the back face 14. The front face 12 includes a display screen 19, a keypad 21, and a speaker 22. The back face 14 includes a camera lens 18, a flash 20, and a battery cover latch 24. The mobile phone 10 is shown in a perspective view, with dashed lines indicating the internal components and the open position of the back cover 14.

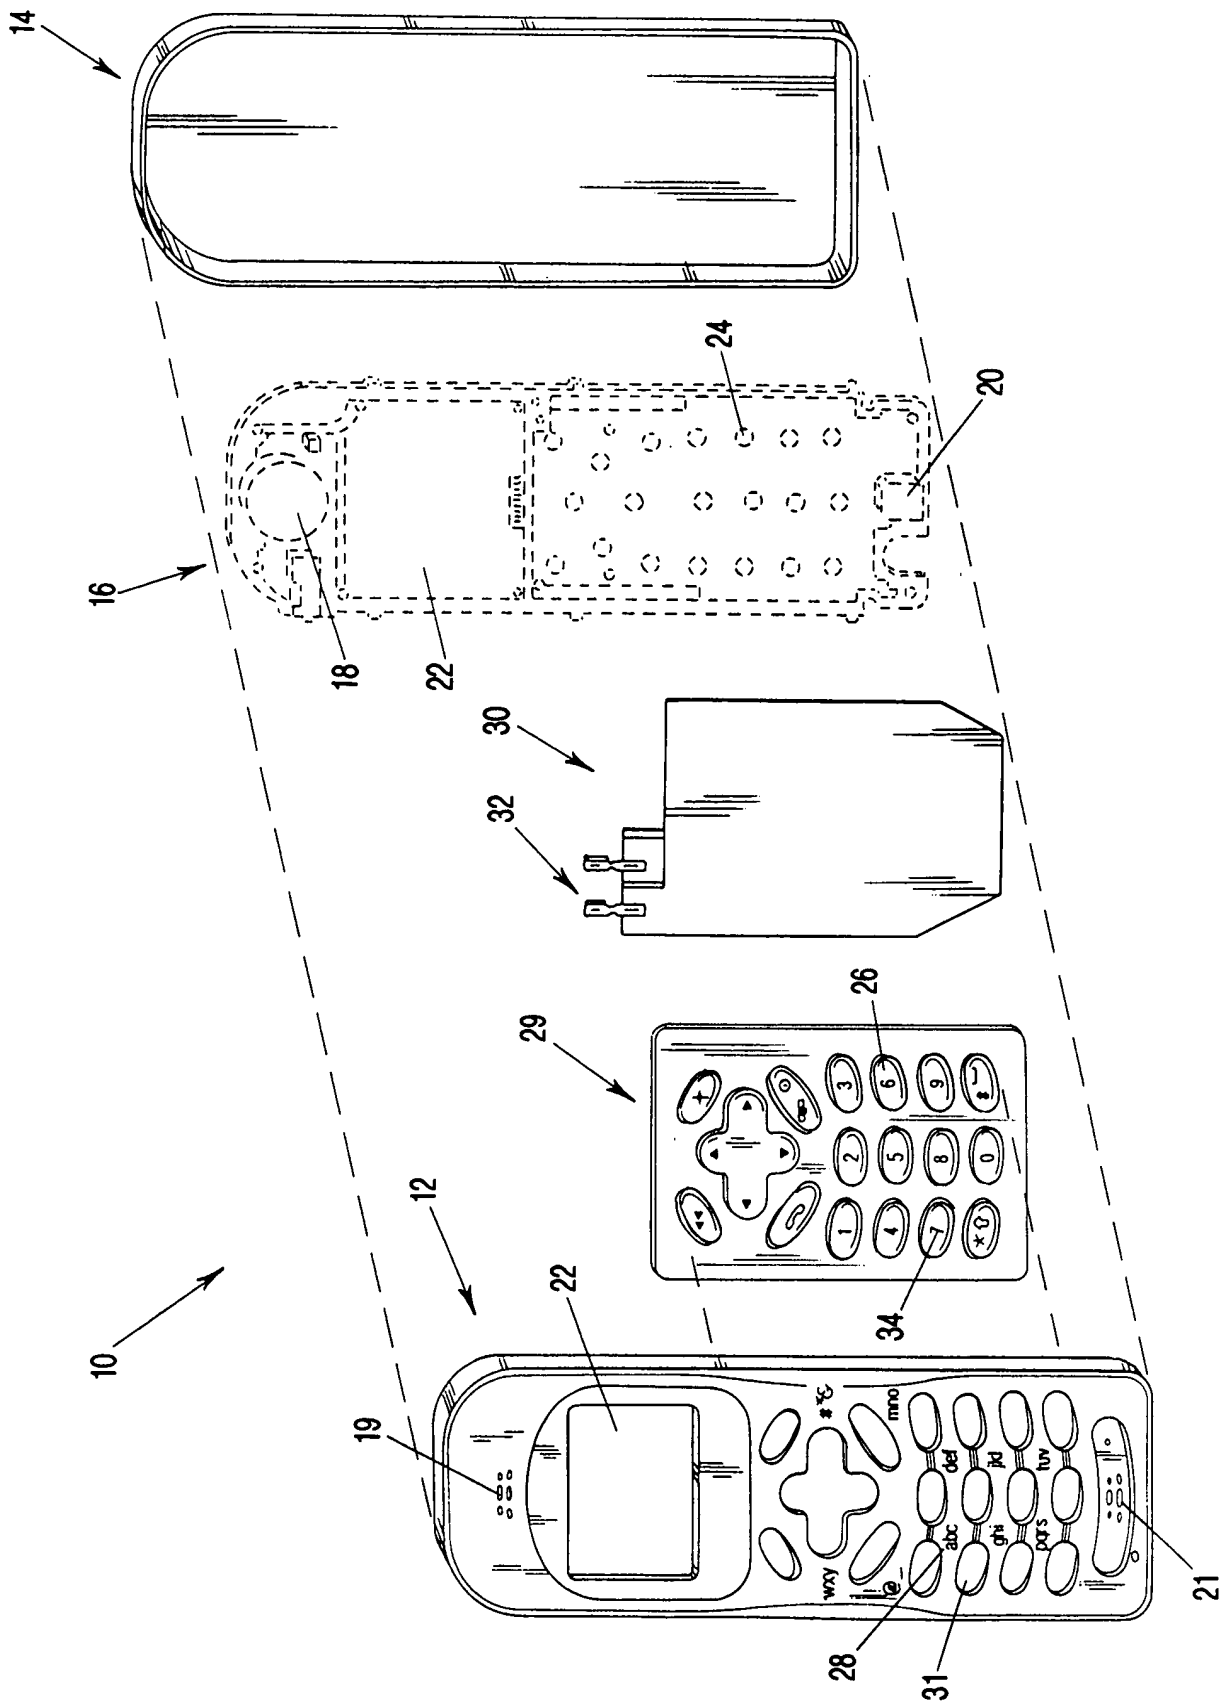


FIG-2